PG-9025说明书 80g米黄色特种纸,双面折页 尺寸: 630x142mm

正面











0	peration	instruction

	Android system	n			
	Android general mode (HID Gamepad Mode)	Ke	eyboard Mode	Mouse Mode	
Bluetooth pairing buttons (Press and hold on 2's)	X+Home		A+Home	Y+Home	
Indicator	SEARCH	SEARCH		SEARCH	
Remark	Freely dynamic swift to mouse mode from HID or keyboard mod				
	Windows system				
	D-input Mode		X-input (wired connection)		
Bluetooth pairing buttons (Press and hold on 2's)	X+Home		Connect gamepad to PC		
Indicator	SEARCH		SEARCH		
Remark	Need buy a Bluetooth 4.0 receiver		Data cable included		

1.Working voltage: DC3.7V 2.Working current: 30 mA 3 Continouse gameplay time: 10H 4.Static current: <35uA



1. Please do not store this product in wet or high-temperature areas. 2. Don't knap, beat, drub, pierce, or try to decompose this product, to avoid unnecessary damage to the product.

5.Charging voltage/current; DC5V/500mA

6.Bluetooth transmission distance: ≤8M

7.Battery capacity: 380mAh

3. The product has built-in batteries, and please don't discard them together with the garbages. 4. Don't charge the controller in a place near the fire or other heat source. 5. Non professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty service.

Frequency asked guestion to operate this Gamepa

Q1: I opened Bluetooth searching, but still can't pair it with my device?

A1: Please turn off and ignore the previous connected device. Then reopen Bluetooth for connect. If you still can't connect, then please use the needle press the RESET button on the back of Gamepad for 5 seconds. Then reconnect the Bluetooth. Q2: I can't turn on the Gamepad

A2: Please recharge the Gamepad before you use it at the first time or use it again after a long period. Please check the charge indicator light turn on while charging and will turn off once fully

charged. If the Charge indicator do not light on while charge cable connected to the power source, then please try to change a charge cable or use the needle press the RESET button on the back of Gamepad for 5 seconds.

Q3: Joystick moving itself or other buttons works improper when entered the game A3: Please use the needle press the RESET button on the back of Gamepad for 5 seconds. Please be reminded don't touch wrong buttons while Bluetooth pairing.



User Manual x1 Micro USB cable x1

Pega and ePega trademarks all belong to PEGA LIMI

Patent NO. : ZL2013305100021