



艾派斯

 
### Scorpio gamepad extension key converter

Product Manual (PG-P4013)

#### Product Features:

- 1.This product is mainly suitable for P4 game controller ;
  2. This product can convert P4 Game controller to be compatible with P4, P3, N · S, PC, Android and IOS devices for game operation;
  3. The product supports the TURBO function, and also supports the function of four paddle user-defined setting keys (the factory default is X/□/△/功能);
  4. This product has the function of power interrupt & saving and one key recovery;
  5. Ergonomic structure, comfortable hand feeling ;
- \* Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with our game pad. iPega has no responsibility , iPega reserves the right of final interpretation.

#### Introduction for key functions

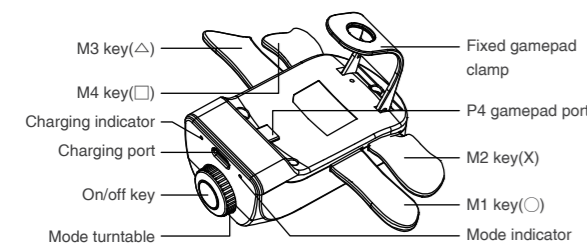


#### Electrical Parameter

1. Working voltage: DC3.7V
2. Working current: ≤50 mA/ access P4 gamepad ≤100 mA/ vibration working current ≤200mA
3. Static current: <20uA
4. Continuous gameplay time: almost 4hours
5. Input voltage/current: DC5V/500mA
6. Charging time: almost 4hours
7. BT3.0, transmission distance: ≤8M
8. Battery capacity: 1000mAh
9. Standby time: up to 30 days once fully charged


#### P4/P3/N·S/PC console connection:

 - 1.Wired connection is required when connecting each mode for the first time, turn the product knob switch to the corresponding mode and press the middle button to turn on, and then use a USB data cable to connect the device to the game console. After the connection is successful, connect the device to the P4 gamepad to connect , Unplug the USB data cable to enter the wireless mode;
  2. The second connection press the top button can be wireless connection;
  3. Device shutdown: Turn the toggle switch to the shutdown position and press the top button to shut down;
- Note: To connect to the P4 game console for the first time, you need to connect to the USB data cable, wait 3-5 seconds for the mode light to go out, unplug the USB cable and the connection is successful, you can enter the wireless mode; PC only supports wired mode

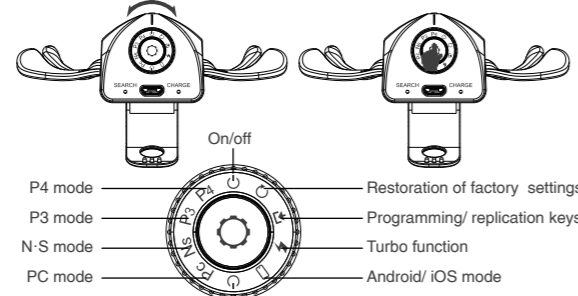

#### Instruction of Android / iOS device wireless connection: (IOS only supports 13.0 or above system)

 1. Turn the product knob switch to Mobile phone mode(□);
2. Press the middle button to turn on;
3. Connect the product to the P4 gamepad, and then press the PS button of the P4 gamepad, the LED light flashes quickly;
4. Turn on the wireless mode of the phone, find the name of Android device (wireless controller)/wireless nameof iOS device (DUALSHOCK 4wireless controller) click on the pairing connection;
5. When using Android devices, it is recommended to use the grape game hall / connection IOS device, recommend the use of Gamevice Live game platform, some iOS MFI game directory: Apple App Store store search download "Gamevice Live" game platform or search MFI . Gameloft and most games can be supported;

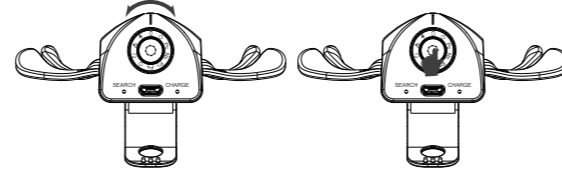

#### Key mapping function:

##### Setting method:

1. When the gamepad is connected to the console, dial the mode switch to the key mapping position and press the top switch to enter the setting mode (temporarily block all functions of the gamepad when setting);
2. Press any dial key to be programmed to add gamepad function key (such as X key), release the dial key settings completed, after setting the gamepad vibration prompt and automatically save exit;
3. can be set at the same time: L1/L2/L3/R1/R2/R3/X/□/△;
4. The four dials after the Product factory set up for X/□/△/功能;

##### Single dial removal method:

According to the above setting methods 1 and 2 repeat operation, gamepad vibration once prompt

#### At the same time clear 4 dial key method:

When the gamepad is connected to the console, dial the mode switch to the key mapping position block all functions) long press the top button 3 seconds to clear all dial button function (gamepad long vibration once prompt);

#### Turbo function:

##### Setting method:

1. If the gamepad is connected to the game console, dial the mode switch to the turbo setting position and press the top switch to enter the setting mode (temporarily block all functions of the gamepad when setting);
2. Press the button need to settled (such as the X button), after clearing is completed, the gamepad will vibrate once and it will automatically save and exit;
3. key can be set at the same time: L1/L2/L3/R1/R2/R3/X/□/△.

##### Single key clearing method:

Turn the mode switch to turbo setting position and press the top switch to enter the setting mode (all functions of the handle are temporarily shielded during setting); Press the set key (e.g. x key), after clearing, the handle vibrates once and automatically saves exits;

##### All key clearing methods:

Turn the mode switch to turbo setting position (temporarily shield all functions of the handle when clearing); Press and hold the top button for 3 seconds to clear all turbo functions (after clearing, the handle will vibrate for a long time and will automatically save and exit);

#### On/off keys long press function:

In addition to restore factory settings and shutdown, the rest of the mode has long press function; Remove the wireless address stored in the current mode P4, P3, N · S · PC . Android/ iOS and shut down; keys mapping, TURBO delete the build map settings and TURBO settings stored in the current

#### Restore factory settings:

Dial the mode switch to restore the factory setting position, press the top switch to restore the factory setting

#### Power down and saving function

Product with power-down saving function, various modes have a separate (button preset), will be saved when setting

#### Other instructions

1. When the device is in P3 mode, it will shut down when plugged into the P4 game console. Others are the same
2. Boot directly into the build map or turbo mode will shut down;
3. Before setting the key map or TURBO change mode please shut down first;
4. Unconnected devices will automatically shut down within 30 seconds;
5. Too low battery power will cause the wireless connection but the button data cannot be uploaded or the device shuts down abnormally after the gamepad is inserted
6. It is recommended to fully charge of the original P4 gamepad when using

#### Operation instructions

Pairing mode	P4 game console	P3 game console	N·S game console	PC computer	Android device	iOS device
	Only supports Wireless connection	Support wireless and wired connection	Only supports wired connection	Only supports wireless connection	Only support wireless connection	
RGB indicators color	blue	Green	Red	Cyan	Purple	
After each mode is successfully connected, the color of indicator is controlled by the game console						

#### Charging function

When charging in ON/OFF state , the blue indicator will be flash quickly Fully charged, the blue indicators will be off;

#### Notes:

1. Please do not store this product in wet or high-temperature areas.
2. The product has built-in batteries, please do not place near fire and other dangerous locations
3. Don't knap, beat, drub, pierce, or try to decompose this product, to avoid unnecessary damage to the product.
4. Non professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty service.
5. Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with our gamepad. iPega has no responsibility , iPega reserves the right of final interpretation.

#### Accessories List



iPega trademarks belongs to IPEGA LIMITED.

Patent No.: ZL202030262875.5



艾派斯

### 红蝎子手柄扩展按键转换器

 
产品说明书 PG-P4013

#### 产品特点:

1. 本产品主要适用于P4游戏手柄;
  2. 本产品可将P4手柄转换兼容P4、P3、N·S、PC、安卓、IOS设备上玩游戏操作;
  3. 本产品支持turbo连打功能, 同时还可支持四个拨片自定义设置按键功能, (出厂默认为X/□/△/功能);
  4. 本产品带有断电保存功能, 一键恢复功能;
  5. 产品符合人体工程学, 手感舒适;
- \* 因官方游戏平台软件升级或源代码变更等不可抗力因素造成部分游戏无法与本产品连接操作, 我公司不负任何责任. 对此我公司保留最终解释权. 售后客服QQ群: 837350687 客服电话: (0755) 2791 8998 在线时间: 周一至周五9:30-17:30



#### 功能按键图示:

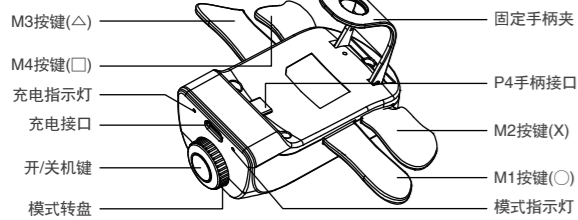


#### 产品特性参数:

- 1.工作电压: DC3.7V;
- 2.单机工作电流: ≤50mA/接入P4手柄≤100mA/震动工作电流≤200mA
- 3.静态电流: <20uA;
- 4.持续使用时间: 约4h;
- 5.输入电压/电流: DC5V/500mA;
- 6.充电时间: 约4小时;
- 7.无线3.0, 传输距离: ≤8M;
- 8.电池容量: 1000mAh;
- 9.待机时间: 满电放置30天;


#### P4/P3/N·S/PC主机连接使用方法:

 1. 首次连接各模式时需要有线连接, 将产品旋钮开关旋转到对应的模式并按下中间按键开机, 然后使用一条USB数据线将产品与主机连接, 连接成功后, 将产品接入P4手柄即可连接, 拔掉USB数据线进入无线模式;
  2. 第二次连接按下产品顶部的按键即可无线连接;
  3. 产品关机: 将拨动开关拨到关机位置, 按下顶部按键即可关机;
- 注: 首次连接P4主机, 需要接入USB数据线, 等待3-5秒模式灯熄灭, 拔掉USB线连接成功, 即可进入无线模式; PC仅支持有线模式。

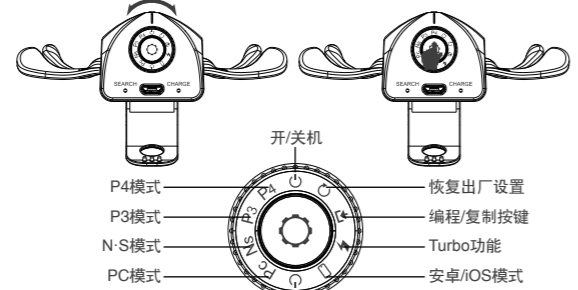

#### 安卓/iOS设备无线连接使用方法: (iOS仅支持13.0以上系统版本)

 1. 将产品旋钮开关旋转到□手机模式;
2. 按产品中间按键并将产品开机;
3. 将产品接入P4手柄, 再按下P4手柄的PS键, 手柄LED灯快速闪烁;
4. 打开手机无线, 找到安卓设备无线名(wireless controller)/iOS设备无线名为(DUALSHOCK 4 wireless controller)点击配对连接即可;
5. 使用安卓设备时, 推荐使用葡萄游戏厅/连接IOS设备时, 推荐使用Gamevice Live游戏平台, 部份iOS MFI游戏目录: 苹果App Store商店搜索下载 " Gamevice Live " 游戏平台或搜索MFI. Gameloft等大多数游戏都可支持;

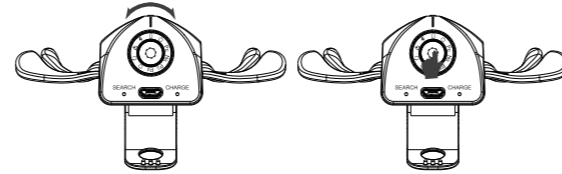

#### 按键映射功能:

##### 设置方法:

1. 在手柄与主机已连接的状态下, 将模式开关拨到按键映射位置, 按下顶部开关进入设置模式 (设置时暂时屏蔽手柄所有功能) ;
2. 按下需要编程的任意一个拨片按键加手柄功能键(如X键), 松开拨片按键设置完成, 设置完成后手柄震动一次提示并自动保存退出;
3. 同时可设置的按键有: L1/L2/L3/R1/R2/R3/X/□/△;
4. 产品出厂设置后面四个拨片为X/□/△/功能;

##### 单个拨片清除方法:

按照以上设置方法1和2重复操作即可, 手柄震动一次提示同时清除4个拨片按键方法: 在手柄与主机已连接的状态下, 将模式开关拨到按键映射位置 (设置时暂时屏蔽手柄所有功能) 长按顶部按键3秒清除所有拨片按键功能 (手柄长震动一次提示) ;

#### turbo连打功能:

##### 设置方法:

1. 在手柄与主机已连接的状态下, 将模式开关拨到turbo设置位置, 按下顶部开关进入设置模式 (设置时暂时屏蔽手柄所有功能) ;
2. 按下需要设置的按键 (如X键) , 设置完成后手柄震动一次提示并自动保存退出;
3. 同时可设置的按键有: L1/L2/L3/R1/R2/R3/X/□/△.

##### 单个按键清除方法:

1. 将模式开关拨到turbo设置位置, 按下顶部开关进入设置模式 (设置时暂时屏蔽手柄所有功能) ;

##### 所有按键清除方法:

1. 将模式开关拨到turbo设置位置 (清除时暂时屏蔽手柄所有功能) ;
2. 长按顶部按键3秒清除所有turbo功能 (清除完成后手柄震动一次提示并自动保存退出) ;

#### 开/关机按键长按功能:

除恢复出厂设置与关机, 其余模式都有长按功能: P4、P3、N·S、PC、安卓/iOS 删除当前模式储存的无线地址, 并关机; 按键映射, TURBO删除当前模式储存的按键映射设置与TURBO设置;

#### 回复出厂设置:

将模式开关拨到恢复出厂设置位置, 按下顶部开关即可恢复出厂设置;

#### 掉电及功能保存:

产品带有掉电保存功能, 各种模式下都有单独的 (按键预设) , 设置时会保存在产品上;

#### 其他说明:

1. 当设备为P3模式时 插入到P4主机 设备会关机 其它的同理;
2. 开机直接进入按键映射或者turbo模式会关机;
3. 除设置按键映射或者TURBO外 更改模式请先关机;
4. 设备30秒内未连接设备将会自动关机;
5. 电池电量过低会导致无线虽然连接但按键数据无法上传 或者插入手柄后设备异常关机;
6. 建议在使用产品时需将P4原装手柄充满电在进行使用;

#### 操作使用模式:

配对模式	P4主机	P3主机	N·S主机	PC电脑	安卓设备	IOS设备
旋转到相应模式	仅支持无线连接	支持无线有线连接	仅支持有线连接	仅支持有线连接	仅支持无线连接	
按中间按键开机	蓝色	绿色	红色	青色	紫色	
各模式连接成功后, 灯的颜色由主机控制						

 
#### 充电功能:

1. 开/关机状态下充电时CHARGE蓝色指示灯闪烁, 充满熄灭;

#### 注意事项:

1. 请不要把本产品在潮湿或高温地方存储;
2. 产品内置电池, 请不要将产品靠近火源等危险地段;
3. 不要敲击、摔打、刺穿、或试图去分解本产品, 以免对产品造成不必要的损害;
4. 非专业人员误拆卸本产品, 否则不在售后保修服务内;
5. 因官方软件升级或源代码变更等不可抗力因素造成部分游戏无法与本产品连接操作, 我公司不负任何责任, 对此我公司保留最终解释权;

#### 产品清单:

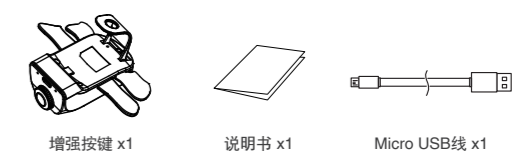

iPega商标属于IPEGA LIMITED 所有.

专利号: ZL202030262875.5