 





## Multifunctional Cooling & Charging Base

User manual(PG-XBX013)

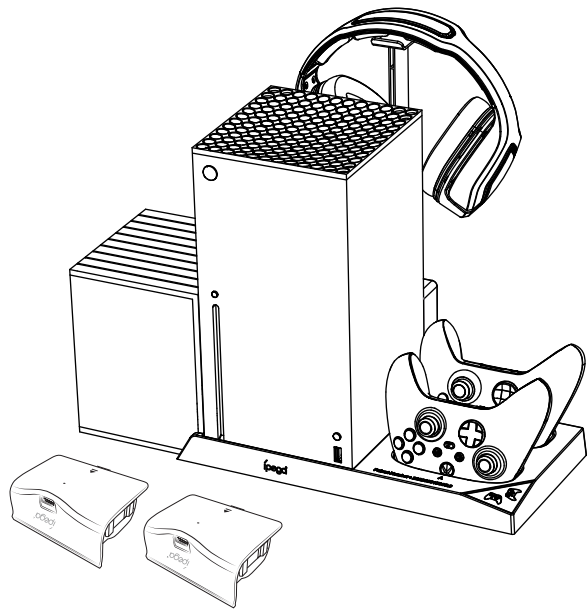
 
### Product Overview

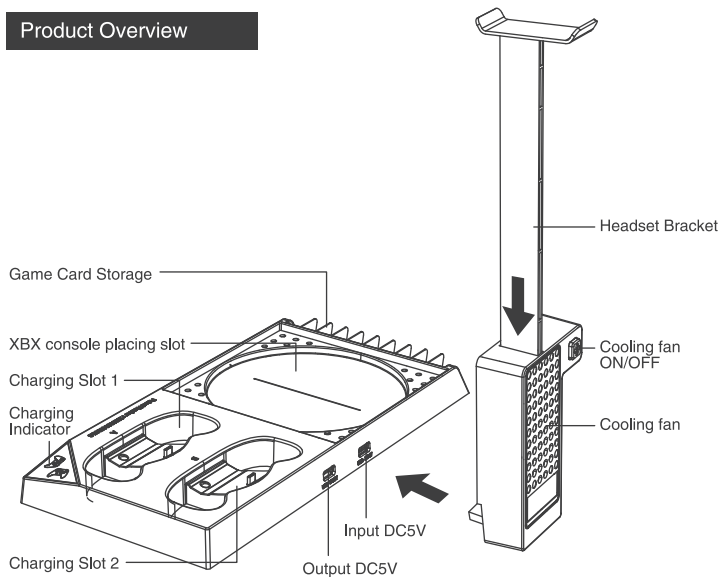

### Application Instruction:

- 1.The products is suitable for original Xbox game console.
- 2.With charging indicator, easy to identify the charging state during charging proess.
- 3.Equipped with two dedicated TYPE C male connector to charge the controllers, it is very convenient to use whenever you pick and place it.
- 4.Equipped with headphone stand, headphone can be placed for easy access.
- 5.Fan can cool and dissipate the Xbox console.
- 6.Equipped with game disc rack, can hold 10 game discs.

### Electrical Parameter:

- 1.Working voltage: DC 4.8 5.2V.
- 2.Input current≤1600mA.
- 3.Allowable charging current: ≤600 mA(A single gamepad).
- 5.Charging time: 4-5H.
- 6.Battery capacity: 1400mAh\*2

 
### Operation instructions:

- 1.Put the Xbox console into the base slot, connect the USB male of the power connector (Cooling fan) to the Xbox console, and connect the other end of the USB male to the USB female of the base, after the power is successfully connected, the green light corresponding to the two charging positions is always on.
2. Install the battery into the Xbox gamepad, align the type-C interface on the battery pack with the type-C plug on the base, and put it into the charging position of the gamepad, the corresponding charging indicator light turns red to start charging, and the indicator turns green after fully charged.
- 3.When the two Xbox Gamepad are charged at the same time, the two charging indicator lights on the panel turns red, the corresponding charging indicator light on the panel turns green after fully charged.
- 4.If you need to cool the console, press the switch button, the fan works to dissipate heat from the game console.
- 5.This charger can charge our two battery packs separately.
- 6.The headphone bracket can be used to hang up the headphone, easy to pick up when using, hang up when not using, convenient and tidy.
- 7.The attached 2 battery packs can be charged directly with the original charging cable.

### Notes:


1. Notes:  
When Xbox gamepad is nearly fully charged, the charging indicator of this product does not conform to the prompt of Xbox gamepad, which is a normal phenomenon.  
(e.g.: The Xbox Gamepad charge indicator indicates fully charged, but it is still charging when check in the Xbox console)
- 2.Please do not charge in high-tempeature environment or poorly ventilated place.
- 3.Avoid exposure to the sun, rain, moisture and heat!
- 4.Do not use chemical solvent to clean the product!

### Accessories List

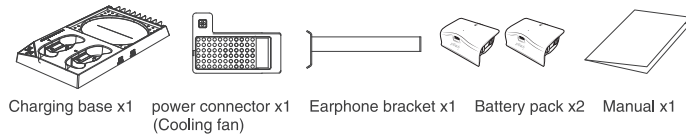

## 5合1多功能充电底座

 
产品说明书(PG-XBX013)

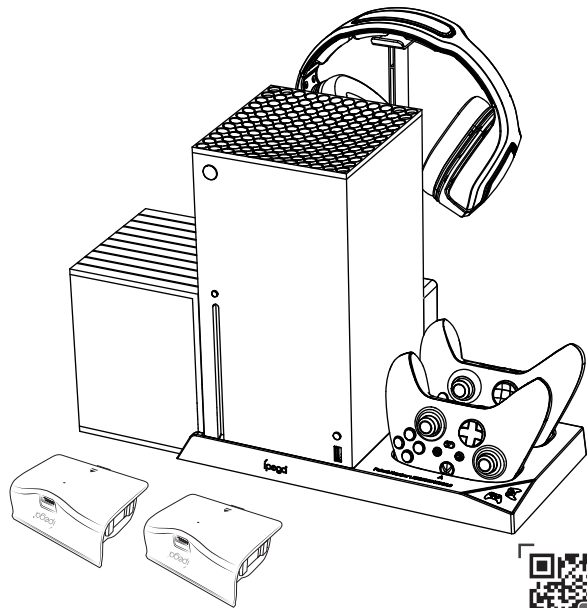

售后客服QQ群: 837350687  
客服电话: (0755) 2791 8998  
在线时间: 周一至周五9:30-17:30

ipega官方微信公众号

### 产品外观图示:

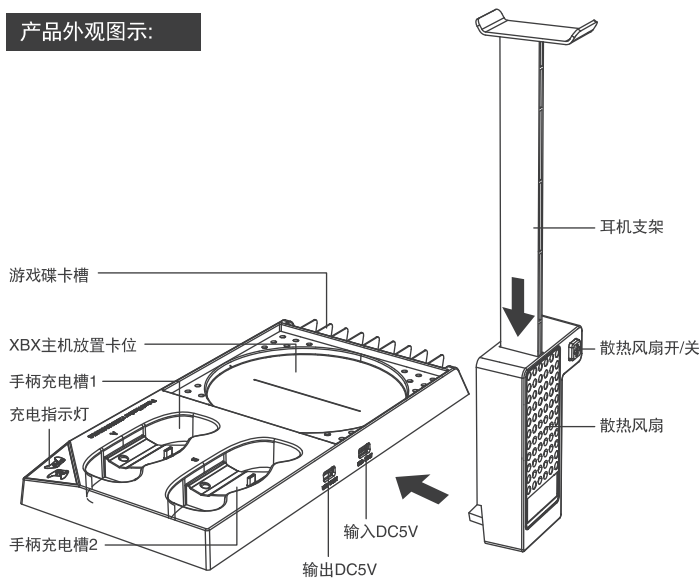 

### 适用说明:

- 1.本产品适用于Xbox原装游戏主机。
- 2.带充电指示灯, 在充电过程中便于识别充电状态。
- 3.配有专用的两个TYPE C公头给手柄电池充电, 随取随放使用非常方便。
- 4.配备耳机支架,可放置耳机, 方便拿取。
- 5.风扇能给Xbox主机降温与散热。
- 6.配备游戏碟架,可放置10个游戏碟。

### 电性参数:

- 1.工作电压: DC 4.8 5.2V
- 2.输入电流≤1600mA
- 3.允许充电电流: ≤600 mA(单个手柄)
- 4.充电时间: 4-5H
- 5.电池容量: 1400mAh (单个电池包)

### 设备使用说明:

- 1.将Xbox主机放入底座卡位, 我们将配备电源连接器(散热风扇)的USB公头接入Xbox主机, 另一端的USB公头接底座的USB母座, 电源成功连接后, 两个充电位对应绿灯常亮。
- 2.将电池装入Xbox手柄上, 将电池包上的Type-C接口对准底座上的Type-C插头放入手柄充电位中, 相对应的充电指示灯红灯长亮开始充电, 充满亮绿灯。
- 3.当两个Xbox手柄电池包同时充电时, 面板上两个充电指示灯红灯长亮。充满电后, 面板上对应的充电指示灯绿灯常亮。
- 4.如需给主机散热, 按下电源连接器开关按钮, 风扇工作给主机散热。
- 5.此座充能单独为我们配备的两个电池包充电。
- 6.耳机支架可以挂上耳机, 使用时方便拿起, 不用耳机时挂上, 方便整洁。
- 7.产品附带的2个电池包可使用原装充电线直接进行充电。

### 产品注意事项:

1. 产品注意事项:  
Xbox手柄快充满电时, 本产品充电指示灯存在与Xbox手柄提示不符合的现象, 此为正常现象;  
(例如: Xbox手柄充电指示已经指示充满, 但是进入Xbox主机查看依然在充电)
- 2.请不要在高温环境下充电使用;
- 3.避免暴晒、雨淋、受潮、受热;
- 4.不宜放置在通风不好地方充电;

### 产品清单:

