 


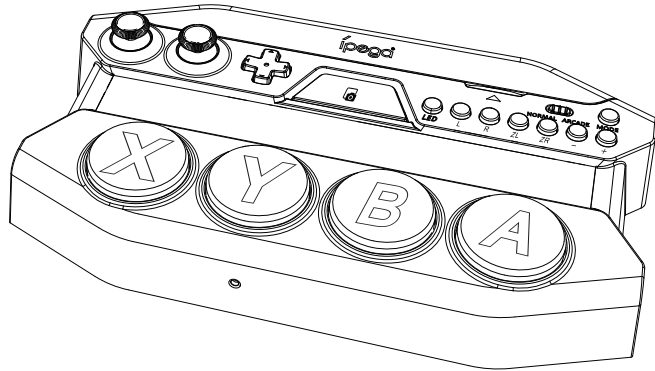

艾派格

## 初音天使游戏控制器

 
产品说明书(PG-SW056)



ipega官方微信公众号

售后客服QQ群: 837350687  
客服电话: (0755) 2791 8998  
在线时间: 周一至周五9:30-17:30

### 产品外观图示

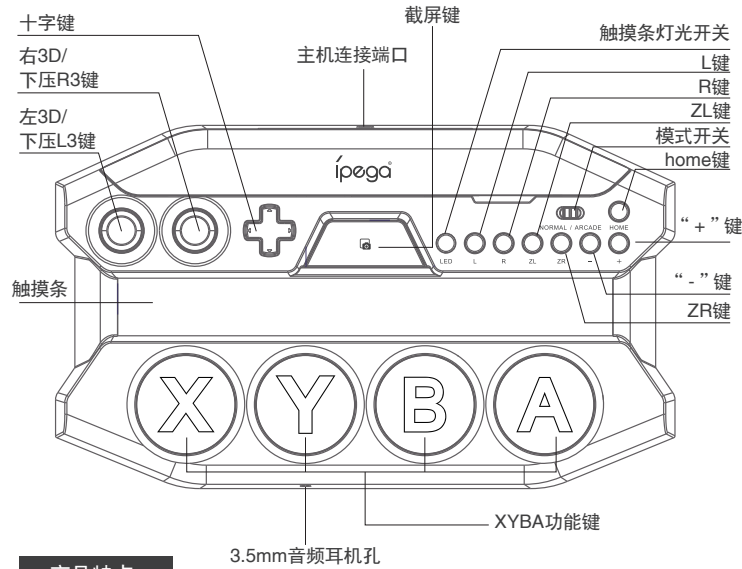

### 产品特点:

 
1. 产品主要适用于N·S主机进行游戏操作, 专用于(初音ミク Project DIVA MEGA39's)。
2. 本产品多种接法, 即插即用, 通过USB数据线与N·S底座连接, 也可直接将N·S主机插入产品上直接向主机取电并控制主机的游戏操作;
3. 产品触摸条带有LED灯, 当手指触摸时会跟随发光。
4. 结构符合人体工程学, 手感舒适。
5. 支持PC USB在线升级产品程序, 从而适应最新的软硬件更新, 可有效避免因主机升级系统从而导致产品无法使用的难题

\*因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作, 我公司不负任何责任。对此我公司保留最终解释权。

### 产品使用说明:

#### 连接主机:

1. 连接产品前, 将N·S主机系统设置为: 手柄与感应器 -- Pro手柄的有线连接, 处于开启状态;
2. 请将数据线的USB插头连接到N·S底座的USB端口, 另一端连接产品顶部的TYPE-C数据接口。

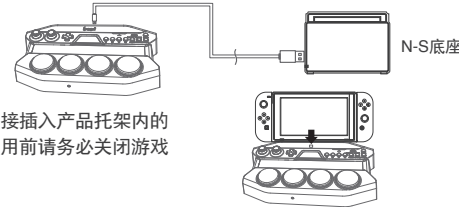

3. 也可将N·S主机直接插入产品托架内的type-C接口使用 (在使用前请务必关闭游戏内的“触屏游玩”)。


4. 产品每次通电都会自行检测, 在检测过程中请不要用手等触摸滑块, 否则可能会造成误操作, 需要拔下USB重新连接检测。  
自检亮灯顺序: X-Y-B-A点亮后A-B-Y-X熄闪3下熄, 然后触摸板每个灯轮流点亮一下, 再全部点亮, 触摸板LED灯为呼吸状态变化。

#### 模式设置:

 正常模式:

1. 将模式开关拨到NORMAL 位置;
2. 触摸条模拟为左右3D摇杆功能, 触摸条将分为左右各一半的区域:

模拟左3D摇杆区域      模拟右3D摇杆区域

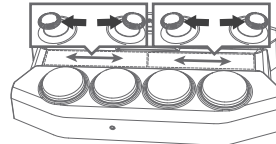


游戏专用模式:

1. 将模式切换开关切换到ARCADE 位置,此模式适合玩: (初音ミク Project DIVA MEGA39's) ;




## Controller for Hatsune Miku

 User Manual (PG-SW056)

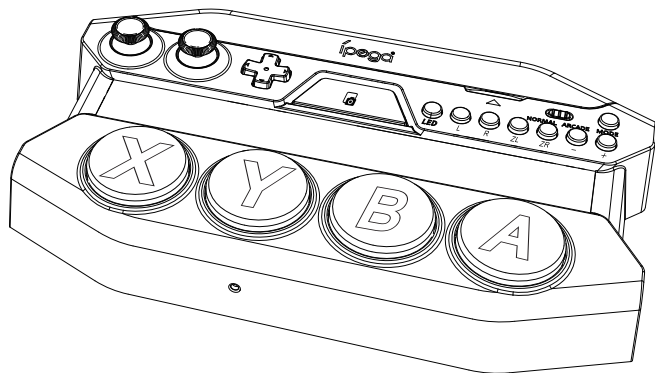

### Function Button:

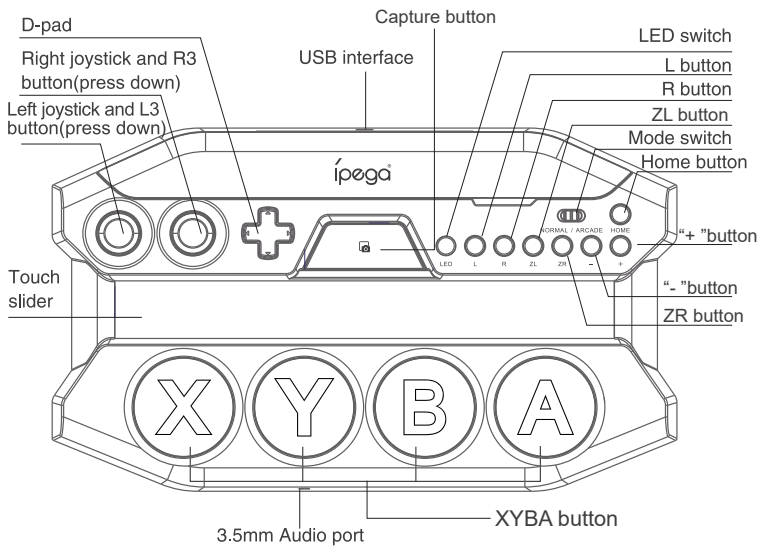 

### Product Application:

 
1. Compatible with N·S console, mainly suitable for playing Hatsune Miku Project DIVA MEGA39's.
2. With multiple connection methods, Plug & Play, connect to the N·S console base by using a USB cable or insert the console to this product for gaming operation.
3. The "Touch Slider" with LED light which will follow the finger movement while touching.
4. With ergonomic design, bring better hand feeling.
5. Support online upgrade by using PC, suitable for latest software and hardware updates, to avoid product to be unusable while the console upgrade the system.

★ Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with our gamepad. The company has no responsibility, the company reserves the right of final interpretation.

### How to use:

#### Connection instructions:

1. Before connecting, start the N·S console: System Settings -- Controllers and Sensors -- Turn On Pro Controller Wired Communication ;
2. Connect N·S base with the product by using a USB Type C cable (TYPE-C interface at the top of the product).

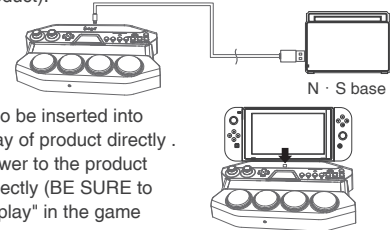

3. The N·S console can also be inserted into the type-C interface in the tray of product directly . N·S console can supply power to the product and can control the game directly (BE SURE to turn off the "touch screen to play" in the game before use) .
4. The product will self-test every time when it is powered on. Please do not touch the slider during the testing process, otherwise it may cause misoperation, you need to reconnect for testing.


Self-inspection lighting: X-Y-B-A lights up and A-B-Y-X flashes 3 times, then each light on the touchslider turns on once, and then all lights up, the touchslider LED lights change in breathing state.

#### Mode setting:

 Normal Mode:

1. Setting the mode switch to NORMAL ;
2. Simulation is left and right 3D joystick function, touch slider will be divided into left and right areas;

Left Joystick Area      Right Joystick Area

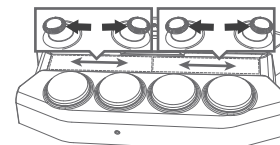

ARCADE mode:

1. Mode switch change to ARCADE mode . this mode is suitable for playing: Hatsune Miku Project DIVA MEGA39's .

### 游戏设置 (初音ミク Project DIVA MEGA39's)

: 在使用本产品玩游戏前, 请先在游戏内进行以下设置

1. 在进入游戏后在主菜单页面选择“自定义”。
2. 选择“游戏与操作设定”。
3. 选择“街机模式”。
4. 在显示旋律图标选项中, 选择“XYBA”;



 
### 产品技术参数:

工作电压: DC5V;      工作电流: <300mA;  
线长: 3米


### 注意事项:

1. 请不要把本产品在潮湿或高温地方存储。
2. 不要敲击、摔打、刺穿、或试图去分解本产品, 以免对产品造成不必要的损害。
3. 非专业人员误拆卸本产品, 否则不在售后维修服务内。
4. 因官方软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作, 我公司不负任何责任。 对此我公司保留最终解释权;

### 产品清单:



游戏控制器 x1

 

Type-C数据线 x1



说明书 x1

### Game settings (Hatsune Miku Project

DIVA MEGA39's) :

1. After entering the game, select Customize on the main menu.
2. Choose game and operation settings. (As shown below)
3. Choose "Arcade Mode" .
4. Choose mode icon as "XYBA" .



 
### Electrical Parameters:

Working voltage: DC5V;      Working current: <320mA;  
Cable Length: 3 m


### Notes:

1. Do not store product in humid or high temperature places;
2. Do not knock, beat, puncture, or try to disassemble to avoid unnecessary damage to the product;
3. Non-professionals disassemble this product by mistake otherwise it will not be cover by the after-sales warranty service;
4. Our company is not responsible for the failure of some games to connect with this product due to irresistible factors such as software upgrade or source code change of the official game platform. Our company reserves the right of final explanation.

### Included:



Controller x1

 

Type-C USB Cable x1



User manual x1