


派岩鱼

NS2 Joypad充电座

产品说明书(PG-SW2052)

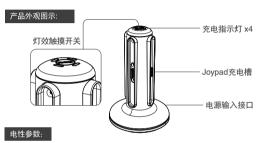

- 1. 输入电压: DC 5V 3. 充电时间: 3H
- 2. 单个手柄充电电流: 200mA

适用说明:

- 1.本产品是一款用于NS 2原装Joypad手柄的充电座。
- 2.具有4个充电插槽,支持给一至四个Jovpad手柄同时充电;
- 3.配备Type-C接口,支持NS 2原装底座为产品提供电源输入;
- 4.配备触摸开关,具备9种灯光效果调节
- 5.配备充电指示灯,可实时显示手柄充电的状态;
- 6.使用场景:与NS 2原装Joypad手柄及底座配合使用,需使用NS 2原装电源适配器,在室内无强磁环境下使用。

设备使用说明:

- 1. 将产品接入NS 2原装底座,通过充电线为产品提供电源输入。
- 2.产品通电后, 4个Joypad手柄充电指示灯蓝色常亮。
- 3.将Joypad手柄插入任意插槽进行充电,充电时对应指示灯橙色常亮, 充满电对应指示灯蓝色常亮。
- 4. 产品配备灯效触摸开关,支持9种灯光效果 调节:按下灯效开关键可以在9种灯光效果中 依次切换,长按3秒可强制关闭灯效,再短按 一次可重新开启灯效(有记忆功能,灯效模式 与关闭前一致)。



产品注意事项:

- 1. 请不要把本产品在潮湿或高温地方存储。
- 2. 请不要敲击、摔打、刺穿、或试图去分解本产品,以免对产品造成不必要的损害。
- 3. 非专业人员勿拆卸本产品,否则不在售后保修服务内。
- 4. 请勿随意丢弃本产品,须给有资质的机构回收。
- 5. 因不可抗拒的因素造成部分产品无法连接操作,我公司不负任何责任, 对此我公司保留最终解释权。
- 6. 请勿用于其他非NS 2原装Joypad手柄充电。

产品清单







充由座x1


USB充由线x1

说明书x1



Charging Dock for NS 2 Joypad

Product Manual (PG-SW2052)

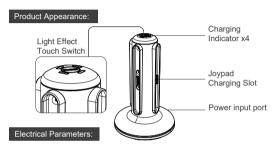

- 1.Input Voltage: DC 5V
 2.Single Charging Current: 200mA
- 3. Charging Time: 3H

Applicable Instructions:

- 1. This product is a charging dock for the original NS 2 Joypad.
- 2.It has 4 charging slots, supporting charging one to four Joypad simultaneously.
- 3.Equipped with a Type-C interface, supporting the original NS2 dock to provide power input for the product.
- 4. Equipped with a touch switch, with 9 kinds of light effect adjustments.
- 5.Equipped with a charging indicator, which can display the charging status of the Joypad in real time.
- 6.Use scenario: Used with the original NS 2 Joypad and dock.
- It is necessary to use the original NS2 power adapter and use it indoors without a strong magnetic environment.

Instructions:

- 1.Connect the product to the original NS2 dock and provide power input to the product through the charging cable.
- 2. After the product is powered on, the 4 Joypad charging indicators will light up blue.
- 3. Insert the Joypad into any slot for charging. The corresponding indicator light will be orange during charging, and the corresponding indicator light will be blue when fully charged.
- 4.The product is equipped with a light effect touch switch, supporting 9 kinds of light effects adjustment: Press the light effect switch key to cycle through 9 kinds of light effects, long press for 3 seconds to force the light effect to turn off, and then short press



once to turn on the light effect again (with memory function, the light effect mode is the same as before it was turned off).

Notes:

- 1.Please do not store this product in a humid or high-temperature place.
- 2.Please do not knock, drop, puncture, or attempt to disassemble this product to avoid unnecessary damage to the product.
- 3.Non-professionals should not disassemble this product, otherwise, it will not be covered by the after-sales warranty service.
- 4.Please do not discard this product at will. It must be recycled by a qualified organization.
- 5.Our company is not responsible for some products that cannot be connected and operated due to irresistible factors. Our company reserves the final right of interpretation.
- $6.\mbox{Do}$ not use it for charging Joypad other than the original NS 2.

Product List:







Charging Dock x1

Charging Cable x1

Instructions x1