



派鲨鱼

## 无线版N-S全功能游戏手柄

产品说明书(PG-SW068)



扫描二维码查看产品使用说明书

操作方法: 扫上方二维码关注“派鲨鱼(ipega)”微信公众号, 点击菜单栏的“使用说明”, 点击“产品说明书”查看。

技术支持QQ群: 837350687  
客服电话: 0755-2791 8998  
在线时间: 周一至周五9:30-17:30

## Wireless N-S full-featured game controller


Product manual (SW068) English version

### Product description:

- This controller is suitable for playing games on N-S devices;
- The controller's function button corresponds to the button function of the N-S\_pro controller, and supports the TURBO and auto to play continuously.
- The controller supports vibration and six-axis, NFC functions, giving players a better gaming experience;
- The controller supports one-key wake-up and one-key direct connection. When you use the new controller for the first time, long press the HOME button to turn on the controller and connect it to the host. Any key can be pressed to resume the wakeup function after a successful connection;
- The controller supports N-S wired and wireless connection to the host;
- It has an ergonomically perfect structure and which makes your hands comfortable;

★ If some games can not be connected to the controller due to irresistible factors such as official game platform software upgrades or source code changes, our company would not bear any responsibility, and our company reserves the right of final interpretation.

### Function button diagram:

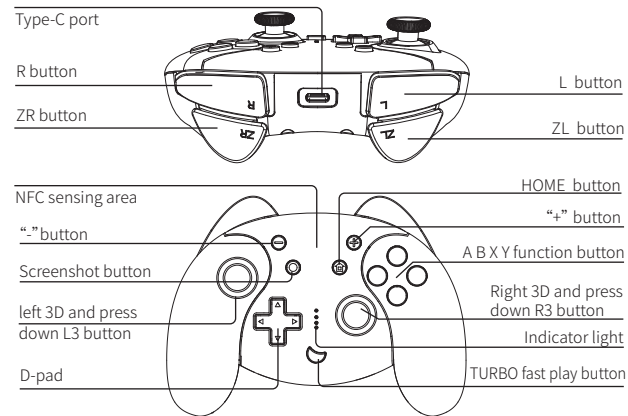


### Product characteristic parameters:

Working voltage:	DC3.7V;	Input voltage/current:	DC5V/500mA;
Working current:	<30mA;	Charging time:	about 3 hours;
Static current:	<20uA;	Wireless transmission distance:	8M;
Continuous use time:	>8h;	Battery capacity:	400mAh;
		Standby time:	30 days when fully charged

### Product instructions:

#### 1. Switch host wireless connection (with wake-up):

- Connect the controller to the host for the first time:  
Turn on the Switch host, and in the main menu interface of the host, touch and click it with your finger: Controllers → Change Grip/order to enter the host pairing mode interface Press L + R on the controller. On the controller, press the “HOME” button for 3 seconds to turn on the controller and enter the pairing mode. The four LEDs on the controller begin to flash in a rapid cycle. When a single light is always on, the controller is paired with the host successfully, and then press the A button to operate.
- Wake up the controller and connect back to the host:  
When the host is turned on, press any key (Priority is given to A.B.X.Y.Z.L.L.ZR.R. cross key, etc.) to wake up the controller, automatically connect back to the host, and press A to operate;
- Wake up the host:  
When the host is in sleep mode, short press the HOME button to turn on the controller and wake up the host, automatically connect the controller to the host, and then press the A button to operate.

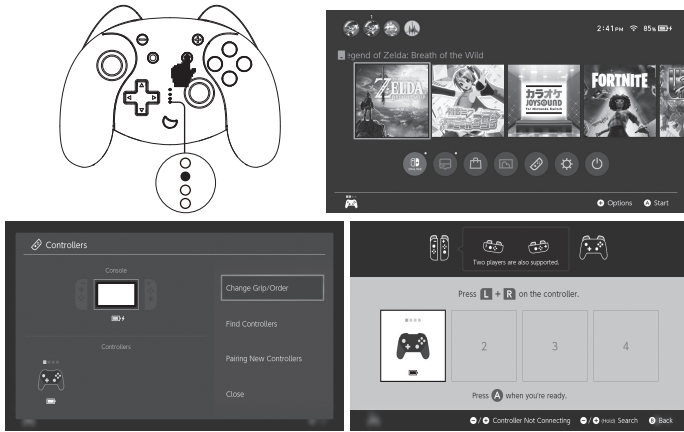

#### 2.Switch host wired connection:

- Before connecting, please make sure that the “Wired connection of Pro controller” in the N-S host is turned on.
- When the controller is off, connect the controller directly to the host with the data cable and press the A button to operate.
- When the connection is successful, the LED light will flash slowly (once every 2 seconds) when charging, and it is always on when it is fully charged.

### Operation and use mode:

Pairing mode (Long press for 3 seconds)	Switch host	
	Switch wireless mode	Switch wired mode
	Press HOME for 3 seconds	directly plug in the data cable
Indicator light	LED	LED
Remarks	Support NFC	No Support for NFC

### NFC sensing function:

- NFC function only supports N, S, N, SL host.
- Enter the NFC-enabled games into the NFC swipe page, and bring the original N-S doll close to the controller sensing area to swipe successfully

**Note:** The NFC sensing function supports the original dolls and the most cards on the market

### TURBO/AUTO function:

- The action buttons include (A/B/X/Y/L/ZL/R/ZR) 8 buttons, all of which can be set manually set with the TURBO function;
- Setting method:  
Long press the action button, and lightly press the TURBO button at the same time, the TURBO function will be turned on; Long press the action button and press the TURBO button for the second time, the AUTO function will be turned on, and it will automatically play continuously; Long press the action button, and at the same time lightly press the TURBO button for the third time, TURBO/AUTO function will be off;
- The TURBO/AUTO function is divided into three levels, TURBO button + up to increase increases the frequency, TURBO button + right 3D down to reduce the frequency (8 times, 15 times, 20 times).
- TURBO+Minus button clears all TURBO settings.
- After the product is disconnected, the previously set TURBO/AUTO function is automatically cleared. If you want to restart it, you must set it again.


### Controller charging/sleep/wake-up function:

- When the controller is power off and being charged (press the HOME button to turn on/off), the LED1-LED4 indicator lights will flash slowly, and the lights will be off when it is fully charged. When the controller is being charged in the wireless connection state, the corresponding indicator light will flash slowly and stay on when it is fully charged.
- Sleep/wake-up function: The game controller will enter sleep mode if it is not used within 5 minutes. When you need to use it again, you need to press the HOME button to wake it up and connect back to it.
- When the battery power is low, the corresponding indicator light will flash quickly to indicate that the device needs to be charged. If the device is not charged for a long time, the device will automatically shut down.

### Precautions:

- Please do not store this product in humid or high temperature places.
- Do not knock, beat, puncture, or try to disassemble the product, so as not to cause unnecessary damage to the product.
- Non-professionals disassemble this product by mistake, otherwise it will not be covered by the after-sales warranty service.
- If some games can not be connected to the controller due to irresistible factors such as official game platform software upgrades or source code changes, our company would not bear any responsibility, and our company reserves the right of final interpretation.

### Product List:

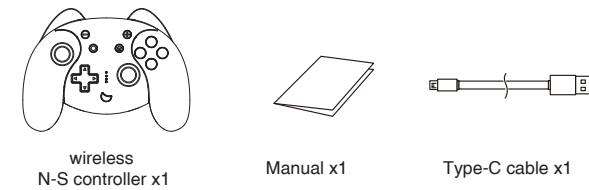

派鲨鱼

## ワイヤレスN-Sマルチ機能ゲームコントローラー

取扱説明書(PG-SW068)

### 製品説明:

- 本製品はN-Sデバイスのゲームに適用します。
- 本製品のボタンはN-S\_proのコントローラーのボタンと同じで、TURBO連射とauto自動連射に対応します。
- 本製品は振動、6軸、NFC機能に対応します。プレイヤーにより良いゲーム体験を提供します。
- 本製品はワンボタン喚起に対応します。初めてご使用の時、「HOME」ボタンを長押しして本体と接続する必要がありますが、一度接続ができれば、その後の使用中に任意ボタンで喚起されると自動接続します。
- 本製品はN-S本体との有線、無線接続に対応します。
- 人体工学を基いたデザイン、持ち心地が良い。


★ ゲームソフトウェアの更新またはソースコードの変更など不可抗力によりゲームの一部の利用ができないことに関して弊社はその責任を一切負いません。なお、弊社は最終解解释权を保有します。

### 仕様:

動作電圧: DC3.7V  
動作電流: <30mA  
自己消費電力: <20uA  
持続使用時間: >8H

入力電圧/電流: DC5V/500mA  
充電時間: 約3時間  
無線転送距離: 8M  
電池容量: 400mAh  
待機時間: 満充電の場合、30日待機可能


### 各部のなまえ:

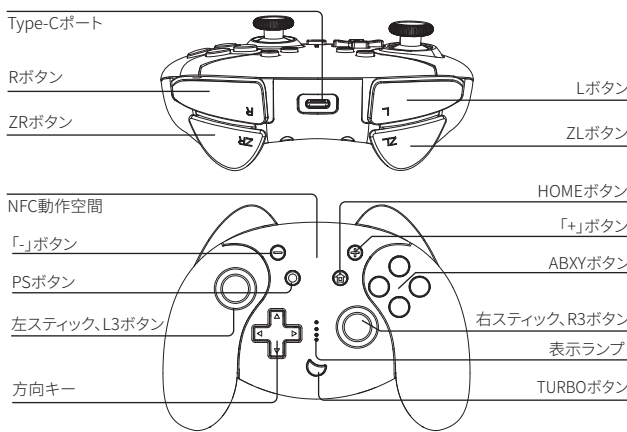

### 使い方:

#### 1. Switch本体と無線での接続(喚起を含む):

- 初めて本体との接続:  
Switch本体をONにします。メインメニュー画面にてコントローラー(Controllers)→持ち方/順番を変える(Change Grip/order)をクリックし、接続画面に入り、使いたいコントローラーのL+Rボタンを押します。コントローラーの「HOME」ボタンを3秒間押し、接続モードに入り、4つのLEDランプが早点滅します。その中の一つのLEDが常時点灯になったら、接続が完了します。次に、Aボタンを押して操作します。
- コントローラーを喚起し、本体と再接続する:  
本体がONの状態ですべてのボタン(A、B、X、Y、ZL、L、ZR、R、方向キーなど)を押すと、コントローラーが自動喚起され、再接続を行います。次に、Aボタンを押して操作します。
- 本体を喚起する:  
本体がスリープ状態で「HOME」ボタンを短く押しすると、コントローラーと本体が喚起され、自動接続を行います。次に、Aボタンを押して操作します。

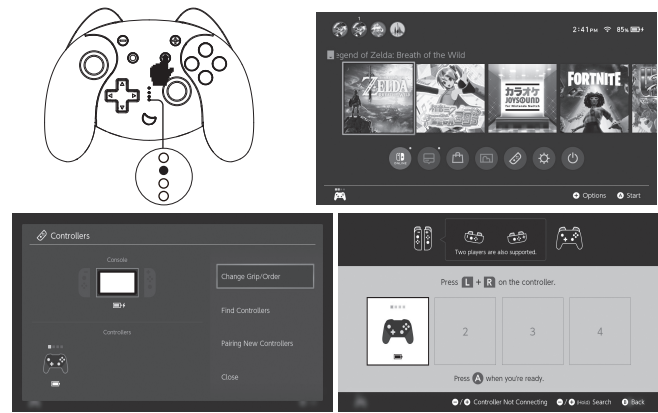

#### 2. Switch本体との有線での接続:

- 接続前に、N-S(本体の「Pro コントローラー有線接続」がONにすることを確認します。
- コントローラーがOFF状態でデータケーブルでコントローラーと本体を接続します。次にAボタンを押して操作します。
- 接続ができた場合、充電時にLED表示ランプが遅点滅(2秒に1回)します、満充電になったら常時点灯に変わります。

### 操作時のモード:

接続モード (3秒長押し)	switch本体	
	switch無線モード	switch有線モード
表示ラン	LED	LED
注記	NFC対応	NFC対応しない

### NFC検知機能:

- NFC機能はN、S、N、SLの本体のみ対応します。
- NFCに対応するゲームをNFC読み取り画面に入ることに対応します。N-S付帯のキャラクターをコントローラーの検知区域に置くだけで読み取りが可能です。

**注記:** NFC検知機能は付帯のキャラクターとほとんど市販カードに対応します。

### TURBO/AUTO機能:

- 8つの動作ボタン(A/B/X/Y/L/ZL/R/ZR)を手動でTURBO機能を設定可能です。
- 設定方法:  
動作ボタンを長押ししながらTURBOボタンを軽く押すと、TURBO機能がONにされます。動作ボタンを長押ししながら2回目にTURBOボタンを押すと、AUTO機能がONにされ、自動連射します。動作ボタンを長押ししながら3回目にTURBOボタンを押すと、TURBO/AUTO機能がOFFされます。
- TURBO/AUTOは三つの速度があります。TURBOボタンを押しながら右スティックを上方向に入力すると、回数が上がります。TURBOボタンを押しながら右スティックを下方向に入力すると、回数が下がります。(8回、15回、20回)
- TURBO+ボタンですべてのTURBO設定をクリアします。
- 接続が切れたら、設定されるTURBO/AUTO機能が自動的にクリアされます。次回利用時、再度設定しなければならない。


### コントローラーの充電/スリープ/喚起機能:

- コントローラーがオフ状態(HOMEボタンでON/OFFする)で充電する場合、LED1-LED4表示ランプが遅点滅し、満充電になったら、消灯します。無線と接続する状態で充電する場合、表示ランプが遅点滅し、満充電になったら、常時点灯に変わります。
- スリープ/喚起機能: 何の操作もせず5分ぐらゐ経過すると、スリープに入ります。再度使用したい場合、HOMEボタンを押すと喚起されます。
- 電量不足の場合、電量表示ランプが早点滅します。それでも充電しないなら、本体が間もなく自動OFFします。

### 注意事項:

- 本製品を湿気の高いまたは高温のところに保管しないでください。
- 叩いたり、衝撃を加えたり、鋭利なもので刺したり、分解したりしないでください。損傷の原因となります。
- 専門技術者以外に、本製品をばなさないでください、保証の対象とならない場合があります。
- ゲームソフトウェアの更新またはソースコードの変更など不可抗力によりゲームの一部の利用ができないことに関して弊社はその責任を一切負いません。なお、弊社は最終解解释权を保有します。

### 内容物:

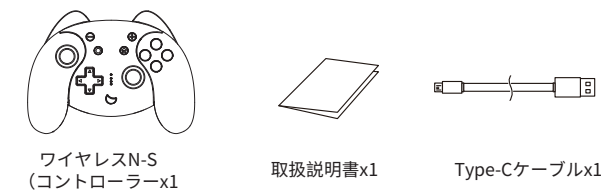

PG-SW068英文版+日文版 无线版N-Switch游戏手柄说明书 70G书写纸双面印刷/单色印刷

风琴折, 折后的尺寸: 105x142mm 展开尺寸: 525x142mm